

Enable-IT 865XS PRO Gigabit Coax PoE Extender Kit Quickstart Guide




Professional Grade Networking

INSTALLING THE 865XS PRO POE EXTENDER KIT

The Enable-IT 865XS PRO Gigabit PoE Extenders have a distance restriction of 3,000ft (915m) over 1-pair of copper wiring from device extension to device extension.

Therefore a site survey of the wiring and installation planning are highly recommended. For highest performance use 100Mhz rated for the interlink wiring.

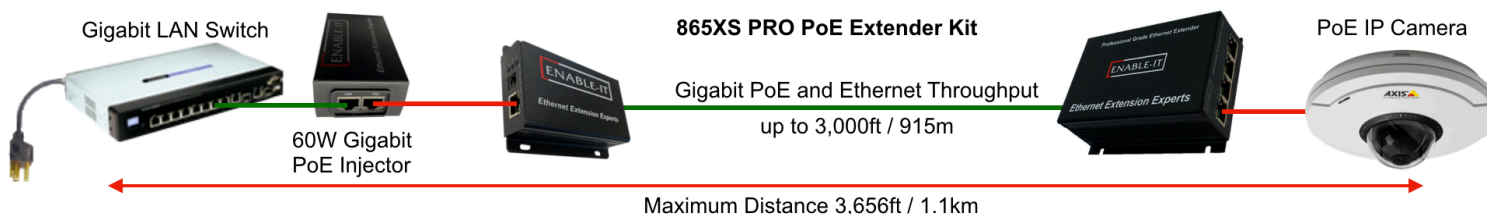

We highly recommend that you perform a quick out of the box test to ensure the working order of your Enable-IT 865XS PRO Gigabit PoE Extender units prior to installing. This will also serve to familiarize you with how easy the process should be. Follow the steps below to perform the Out Of the Box Test.

Step 1 - Attach the 60W 56V DC Gigabit PoE Injector output to the power side LAN port on the single port 865X PRO unit. Power up the PoE Injector. The Power LEDs will indicate the injector and 865X PRO unit are receiving power.

Step 2 - Connect the 865XS PRO RJ-45 Interlink ports together using one of the Ethernet LAN Patch cords provided – as shown by the green line connecting the ports in the diagram above.

On both units, the green Link LED will blink rapidly when it sees the partner unit and connects successfully. The LAN Port LEDs will blink as they see passing traffic (data).

Step 3 - Next for a more detailed test and to confirm your PoE Equipment works with the 865XS PRO, connect your local Ethernet LAN to the 60W 56V DC Gigabit PoE Injector and your remote PoE device/s to the remote 865XS PRO LAN ports and test connectivity. Green Blink rapidly when it sees the partner unit indicates working connection – Green No LED indicates it cannot see the partner unit.

LAN/Power side LEDs

Mode – Green LED (LED On = CO unit, LED Off = CPE unit)

Link – Green Blink rapidly when it sees the partner unit – indicates working connection
– Green No LED indicates it cannot see the partner unit.

Power – Green Solid LED indicates the unit is receiving 12V power.

LAN Sync. – Green LED

Off = No device attached or detected.

On = Solid, indicates the presence of local LAN.

LAN Act. – Yellow LED

Blinking = Indicates the presence of local LAN traffic.

The Green Link LEDs will blink rapidly when it sees the partner unit and connects successfully. This confirms basic proper operation of the units.


Performing the On-Site Installation

After removing the Enable-IT 865XS PRO Gigabit PoE Extender Kit from the box, and performing the Out Of The Box Testing (OOTBT), all that remains to install the unit on-site is to mount the unit, build the interconnect wiring, add voice lines if needed, and attach the LAN device cabling with the provided Ethernet Patch cords.

Building the 865XS PRO Interlink Wiring

The most important aspect of the installation is the correct wiring of the Interlink cabling.

For all wiring you will need to crimp a (LAN Standard) RJ-45 Male head to each end of the contiguous wire run and using the following TIA 568B straight through standard. We recommend using a category rated 100MHz or better twisted pair cable as it is optimized for high throughput frequencies isolated from cross-talk noise. Insert the completed RJ-45 ends into the 865XS PRO Interlink port on each 865XS PRO unit.

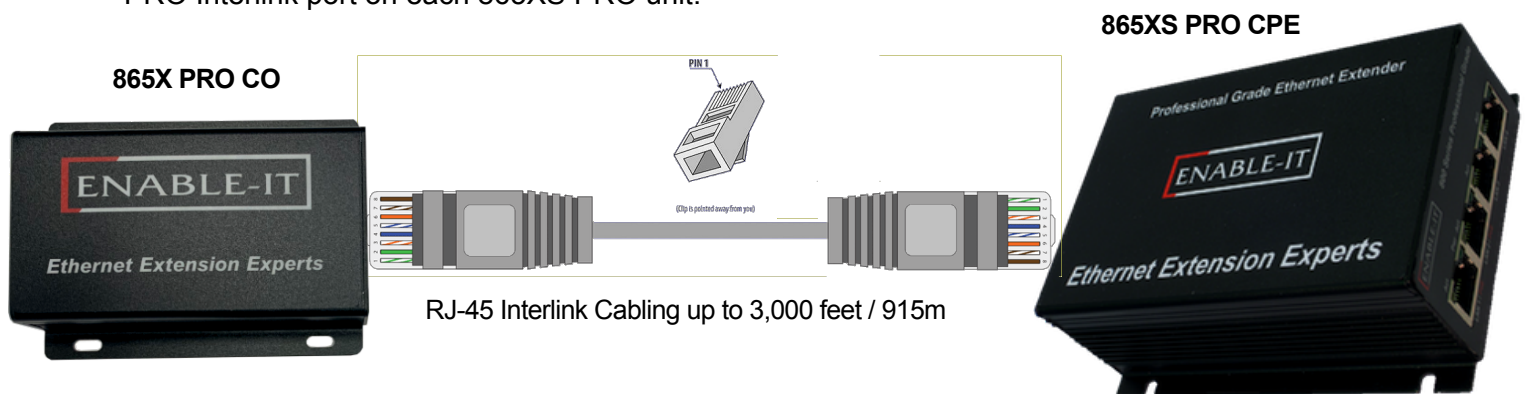

Cabling Devices to The Enable-IT 865XS PRO Extended Ethernet Kit

Connect your local Ethernet LAN to the 60W 56V DC Gigabit PoE Injector and your remote PoE device/s to the remote 865XS PRO LAN ports and test connectivity. Green Blink rapidly when it sees the partner unit indicates working connection – Green No LED indicates it cannot see the partner unit.

Troubleshooting

First examine the backbone wiring pair and make sure you have solid connections. The Interlink green Link LED will blink rapidly when it sees the partner unit and connects successfully. If the Interlink Sync LED Link is off.... Then follow the steps below:

- 1) Make sure your wiring is straight through and not connected to any Telco punch down blocks; If so remove from the block and use Telco butt clips to bridge wire.
- 2) Check for a firm connection of the RJ-45 connections in each 865XS PRO unit, and power is applied to the 865XS PRO CO & CPE units.
- 3) **You can easily isolate any issue by performing an Out Of The Box Test (OOTBT). This test will confirm the correct working order of your Enable-IT 865 XS PRO Ethernet Extender Kit. This will point to a possible issue with your long distance Interlink wiring being affected by possible outside interference.**

865XS PRO (4-Port) DIP Switch Settings

- Default is all DIP switches Down = On for 4-port PoE
- Switch 1:
LAN 1 / LAN 2 PoE On – Down / On Position - Default
LAN 1 / LAN 2 PoE Off – Up / Off Position
- Switch 2: 4-Pair output
PoE 4-Pair – Down / On Position - Default
PoE 2-Pair – Up / Off Position (PIN 1,2,3 & 6)
- Switch 3:
LAN 3 PoE On – Down / On Position - Default
LAN 3 PoE Off – Up / Off Position
- Switch 4: Not Used
LAN 4 PoE On – Down / On Position - Default
LAN 4 PoE Off – Up / Off Position



TECHNICAL SUPPORT

Online Technical Services

The Enable-IT Support [Portal](#) is available 24/7 to open a ticket or check the status of one. Please use this support website as your first source for help as it contains an on-line knowledge base of articles, documentation, FAQ's and other problem-solving resources. This web-based support resource provides the quickest solution to the most common technical support issues.

Returning Products for Warranty Repair

Enable-IT warrants to the original purchaser of this described Product ("you" or the "End User") that, for the limited lifetime period commencing on the date the Product was purchased (the "Warranty Period"), the Product will be substantially free from defects in materials and workmanship under normal use and conditions. Lifetime Warranty details here: <https://warranty.enableit.com>

This warranty does not apply to Products, which are resold as used, repaired or reconditioned. **Electrical or water damage is not covered under this warranty, extended warranties or Advanced Replacement Program (AREP).**

In order to obtain an authorized RMA approval, the End User must complete the required information online located at <https://support.enableit.com>. If you have questions or difficulty completing this information you may contact the Customer Care Team at 888-309-0910 between the hours of 7:00 a.m. and 4:00 p.m. Pacific Time(PST).

Returning Products for Refund

Enable-IT, Inc. offers a generous 45-Day refund on a single Ethernet Extender Kit only, and is subject to a 20% Restocking Fee. Shipments without a valid or authorized RMA number, or sent to our corporate Las Vegas address, can be refused and / or billed for additional shipping.

CONTACT US

Sales and Customer Care:

Toll Free US and Canada

888 309-0910

Other International

+1 702 924-0402

E Mail

sales@enableit.com

support@enableit.com

RMA Support:

<https://support.enableit.com>