

# Enable-IT 824WP Gigabit PoE Extender Quickstart Guide







# **Professional Grade Networking**



# INSTALLING THE 824WP GIGABIT ETHERNET EXTENDER

The Enable-IT 824WP Gigabit PoE Extenders have a distance reach of up to 2,000ft (609m) over any 1-pair wiring (Telephone, Coax, or Category rated) between the CO and CPE units. You can add additional 328ft (100m) onto the end of each unit LAN output ports for a total distance of 2,656ft (809m) from device extension to device extension. Therefore a site survey of the wiring and installation planning are highly recommended. For highest performance use lower gauge wiring like 14AWG ~ 24AWG for the interlink wiring.



The Overview Diagram: This diagram shows the contents of the product box inside the rectangle. Devices outside the rectangle above are your equipment that can be attached.

We highly recommend that you perform a quick out of the box test to ensure the working order of your Enable-IT 824WP Gigabit PoE Extender units prior to installing. This will also serve to familiarize you with how easy the process should be. Follow the steps below to perform the Out Of the Box Test.

- **Step 1** Attach the 360 PoE injector to your LAN data input, Power and to the 821 CO unit. The 821 CO Power LED and 360 PoE Injector will indicate the unit is receiving power.
- **Step 2** Connect the 824W CPE unit Interlink port to the 821 CO Interlink port using one of the Ethernet LAN Patch cords provided. The LED indicators on the 824W LAN ports will provide visual operational status of the units. The (2) LAN/PoE output ports on the 824W are for connecting to PoE equipment only and do not attach a laptop, router or other non-PoE Device to them.

#### Interlink Side RJ-45 Port LEDs

Mode – Yellow LED OFF = Identified as CO Unit – Yellow LED ON = Identified as CPE Unit

Sync - Green LED indicates link established with CPE / Slave unit

**Step 3** - Attach and test and to confirm your PoE Equipment works through the 824WP PoE extension Kit. The Yellow LAN side LEDs will pulse rapidly as it detects traffic.

This confirms basic proper operation of the units.

#### Performing the On-Site Installation

After removing the Enable-IT 824WP Gigabit PoE Extender Kit from the box, and performing the Out Of The Box Testing (OOTBT), all that remains to install the unit on-site is to mount the unit, build the interconnect wiring, add voice lines if needed, and attach the LAN device cabling with the provided Ethernet Patch cords.

#### Mounting the Enable-IT 824WP Gigabit PoE Extender Units


The Enable-IT 824WOP extended PoE solution is designed for quick wall mounting. Choose a location to mount each of the unit's where the maximum distance does not exceed 2,000ft (609m) total between devices to be connected. When wall-mounting the units, it is recommended that you use the appropriate screws or anchors for your mounting surface. If mounting on existing plywood use wood screws; if mounting onto drywall or sheetrock, use plastic drywall anchors to secure your installation.

#### **Building the 824WP Interlink Wiring**

The most important aspect of the installation is the correct wiring of the Interlink cabling.

The 824WP Interlink port (RJ-45 interface) carries this 1-pair signaling over the RJ-45 (pins 1 & 2) - used as data transport and (pins 4/5 & 7/8) - used as transport for PoE Power.

For all wiring you will need to crimp a RJ-45 Male head to each end of the contiguous wire run and using TIA 568B Standards for straight through connection. We recommend using a category rated twisted pair cable as it is optimized for high throughput frequencies isolated from cross-talk noise. Insert the completed RJ-45 ends into the Interlink port on each 824 unit.

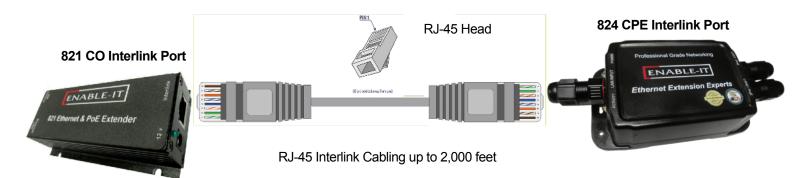

#### Cabling Devices to The Enable-IT 824WP Extended PoE Kit

Attach your remote PoE devices to the 824W CPE unit LAN ports with Ethernet patch cord provided. Attach your local LAN to the 821P CO LAN ports with Ethernet patch cord provided. Attach the power injector to the 821 CO unit LAN Port.

Attach your local Interlink cabling between the Interlink ports on both units – Then do the same for the remote end and plug into the 824 CPE unit Interlink port. The Interlink side Green Sync LED should be solid, indicating is sees the remote partner. There is no sync delay! Your equipment should now be powered up and functioning. LED indicators will provide visual operational status of the 824WP Kit.



#### **Troubleshooting**

First examine the backbone wiring pair and make sure you have solid connections. The Interlink Sync LED will be lit solid Green on each 824 unit. The units sync instantly and have no delay. if either fail to light up.... Then follow the steps below:


- 1) Make sure your wiring is straight through and not connected to any Telco punch down blocks; If so remove from the block and use Telco butt clips to bridge wire.
- 2) Check for a firm connection of the RJ-45 connections in each of the units, and power is applied to the 360 PoE Injector, 821P CO & 824W CPE.
- 3) You can easily isolate any issue by performing an <u>Out Of The Box Test (OOTBT)</u>. This test will confirm the correct working order of your Enable-IT 824WP Gigabit PoE Extender Kit. This will point to a possible issue with your long distance Interlink wiring being affected by possible outside interference.

#### **DIP Switch Details**

By Default the DIP switches are set out of the box for plug and go operation. There is no reason to ever touch of change the DIP switches for basic Ethernet Extension and they are provided for PoE Feature sets and troubleshooting.

• 821P Switch 1: CO

CO Mode – Up / Off Position

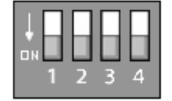

- Switch 2: Not used
- Switch 3: Not used
- Switch 4: PoE Output

PoE ON Mode – Down / On Position

### TECHNICAL SUPPORT

Enable-IT, Inc.'s Customer Care Team support is available directly to customers and distributors. All support requests are processed through the online support portal. This allows us to provide assigned support ticket numbers in order to bring closure to any technical issues.

#### **Online Technical Services**

The Enable-IT Support Portal is available 24/7 to open a ticket or check the status of one. Please use this support website as your first source for help as it contains an on-line knowledge base of articles, documentation, FAQ's and other problem-solving resources. This web-based support resource provides the quickest solution to the most common technical support issues.



#### **Returning Products for Warranty Repair**

Enable-IT, Inc. warrants to the original purchaser of the Product ("you" or the "End User") that, for the Limited Lifetime period commencing on the date the Product was purchased (the "Warranty Period"), the Product will be substantially free from defects in materials and workmanship under normal use and conditions. Electrical or water damage is not covered under this warranty, extended warranties or Advanced Replacement Program (AREP).

In order to obtain an authorized RMA approval, the End User must complete the required information online. If you have questions or difficulty completing this information you may contact the Customer Care Team at 888-309-0910 between the hours of 8:00 a.m. and 5:00 p.m. PT.

Please ship Authorized RMAs to:

RMA Warranty Repair Processing Facility 16027 Brookhurst St, Suite G272 Fountain Valley, CA 92708-1551

#### **Returning Products for Refund**

Enable-IT, Inc. offers a generous 45-Day refund on a single Extender Kit only, and is subject to a 15% Restocking Fee. Shipments without a valid or authorized RMA number, or sent to our corporate Las Vegas address, can be refused and / or billed for additional shipping.

# **ENABLE-IT, INC. LIMITED WARRANTY**

Enable-IT, Inc. warrants the Enable-IT 824 kit solely pursuant to the following terms and conditions.

#### 1.ENABLE-IT PRODUCT WARRANTY.

a. Express Warranty.

Enable-IT warrants to the original purchaser of the Product ("you" or the "End User") that, for the limited lifetime period commencing on the date the Product was purchased (the "Warranty Period"), the Product will be substantially free from defects in materials and workmanship under normal use and conditions. This warranty does not apply to Products, which are resold as used, repaired or reconditioned.

Electrical or water damage are not covered under this warranty, extended warranties or Advanced Replacement Program (AREP).

Enable-IT does not make any warranty with respect to any third party product, software or accessory supplied with or used in connection with the Product and such third party products, software and accessories, if any, are provided "AS IS." Warranty claims related to such third party products, software and accessories must be made to the applicable third party manufacturer.

#### b. Remedies for Breach of Warranty.

In the event of a breach of the foregoing warranty, Enable-IT will, in its sole discretion and at its cost, and subject to the terms of the following paragraph, repair the non-conforming Product, replace the non-conforming Product with a new or reconditioned Product or refund the purchase price for the Product. Any new or reconditioned Product provided pursuant to this paragraph is warranted as provided herein for the remainder of the original Warranty Period. THE REMEDY SET FORTH IN THIS PARAGRAPH SHALL BE THE END USER'S SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE FOREGOING WARRANTY.

#### c. Conditions for Warranty Qualification.

If authorized by Enable-IT to return a Product which does not conform to the warranty set forth above, the End User must: (1) obtain a return materials authorization (RMA) number from Enable-IT by contacting the Customer Service Dept. at 888-309-0910 between the hours of 7:00 a.m. and 5:00 p.m. PST and otherwise fully comply with Enable-IT's then-current RMA policy; (2) return the Product to Enable-IT in its original packaging freight pre-paid; and (3) provide to Enable-IT the original receipt or bill of sale establishing the date on which the Product was purchased. Products returned to Enable-IT without an RMA number will be returned to the End User. Enable-IT shall not be responsible for damage or loss during shipment of the returned Product to Enable-IT.

#### d. Voiding of Warranty.

The express warranty set forth above shall not apply to failure of the Product if the Product has been subjected to: (i) physical abuse, misuse, improper installation, abnormal use, power failure or surge, or use not consistent with the operating instructions provided by Enable-IT; (ii) modification (including but not limited to opening the Product housing) or repair by any party in any manner other than as approved by Enable-IT in writing; (iii) fraud, tampering, unusual physical or electrical stress, unsuitable operating or physical conditions, negligence or accidents; (iv) removal or alteration of the Product serial number tag; (v) improper packaging of Product returns; or (vi) damage during shipment (other than during the original shipment of the Product to the End User from Enable-IT, if applicable).

#### e. Warranty Disclaimers.

THE EXPRESS WARRANTY SET FORTH ABOVE IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER WRITTEN, ORAL, EXPRESS OR IMPLIED. **ENABLE-IT** DISCLAIMS, TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT OF THIRD PARTY RIGHTS. NO PERSON (INCLUDING WITHOUT LIMITATION, ENABLE-IT'S EMPLOYEES, AGENTS, RESELLERS, OEMS OR DISTRIBUTORS) IS AUTHORIZED TO MAKE ANY OTHER WARRANTY OR IF THE DISCLAIMER OF ANY REPRESENTATION CONCERNING THE PRODUCT. IMPLIED WARRANTY IS NOT PERMITTED BY LAW, THE DURATION OF ANY SUCH IMPLIED WARRANTY IS LIMITED TO ONE (1) YEAR FROM THE DATE OF PURCHASE. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY MAY LAST, SO SUCH LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. THIS WARRANTY GIVES THE END USER SPECIFIC LEGAL RIGHTS AND THE END USER MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM JURISDICTION TO JURISDICTION. ENABLE-IT DOES NOT WARRANT THAT THE OPERATION OF THE PRODUCT WILL BE UNINTERRUPTED OR ERROR FREE. ENABLE-IT IS NOT RESPONSIBLE FOR ANY DAMAGE TO OR LOSS OF ANY PROGRAMS, DATA, OR OTHER INFORMATION STORED ON OR TRANSMITTED USING THE PRODUCT.

#### 2. LIMITATION OF LIABILITY.

IN NO EVENT SHALL ENABLE-IT BE LIABLE TO THE END USER, OR ANY THIRD PARTY, FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH OR ARISING OUT OF THE SALE OR USE OF THE PRODUCT (INCLUDING BUT NOT LIMITED TO LOSS OF PROFIT, USE, DATA, OR OTHER ECONOMIC ADVANTAGE), HOWEVER IT ARISES, INCLUDING WITHOUT LIMITATION BREACH OF WARRANTY, OR IN CONTRACT OR IN TORT (INCLUDING NEGLIGENCE), OR STRICT LIABILITY, EVEN IF ENABLE-IT HAS BEEN PREVIOUSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGE AND EVEN IF A LIMITED REMEDY SET FORTH IN THIS AGREEMENT FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL ENABLE-IT'S LIABILITY TO THE END USER, OR ANY THIRD PARTY, EXCEED THE PRICE PAID FOR THE PRODUCT. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. THE ABOVE LIMITATIONS MAY NOT APPLY TO THE END USER.

#### 3. LICENSE AND LIMITATIONS.

The firmware and software embedded in the Product (the "Embedded Software") are licensed to you. Your use of the Product is your acceptance of the warranty terms above and the terms below. You may use the Embedded Software solely in conjunction with your use of the Product. All worldwide right, title and interest in and to the Product, or any portion thereof (including but not limited to the Embedded Software), including all copyrights, patent rights, trademarks, trade secrets, and other intellectual property rights therein and thereto, are and shall remain the exclusive property of Enable-IT and/or its licensors. You acknowledge and agree that you may not, and may not allow any third party to, (i) use the Embedded Software in a manner that is inconsistent with the above express right granted to you or (ii) modify, distribute, reproduce, decompile, disassemble, reverse engineer or otherwise attempt to discover the source code for the Embedded Software.

# **CONTACT US**

#### **Sales and Customer Care:**

Toll Free US and Canada 888 309-0910

866 389-8605 Fax

Other International +1 702 924-0402

+1 702 800-2711 Fax

E Mail sales@enableit.com

support@enableit.com

**RMA Support:**