

Enable-IT 865XW PRO Outdoor Gigabit PoE Extender Kit Quickstart Guide




Professional Grade Networking

INSTALLING THE 865XW PRO POE EXTENDER KIT

The Enable-IT 865XW PRO Outdoor Gigabit PoE Extenders have a distance restriction of 3,000ft (915m) over 4-pair of copper wiring from device extension to device extension.

Therefore a site survey of the wiring and installation planning are highly recommended. For highest performance use 200Mhz rated for the interlink wiring.

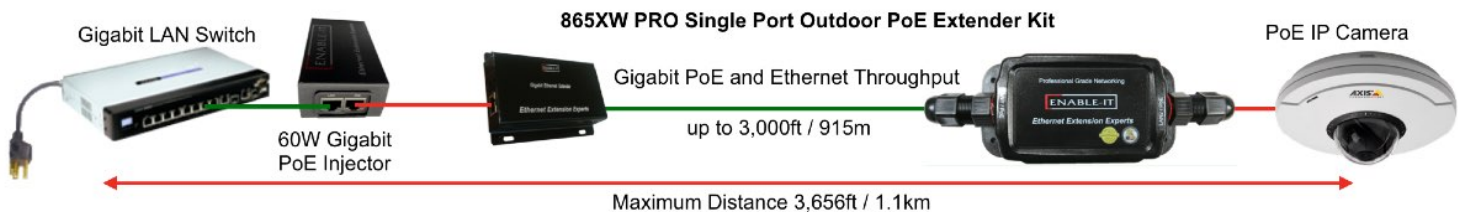

We highly recommend that you perform a quick out of the box test to ensure the working order of your Enable-IT 865XW PRO Outdoor Gigabit PoE Extender units prior to installing. This will also serve to familiarize you with how easy the process should be. Follow the steps below to perform the Out Of the Box Test.

Step 1 - Attach the 60W 56V DC Outdoor Gigabit PoE Injector and power adapter to the local 865XW PRO unit and power up the unit. The Power LEDs will indicate the injector and 865XW PRO unit is receiving power.

Step 2 - Connect the 865XW PRO RJ-45 Interlink ports together using one of the Ethernet LAN Patch cords provided – as shown by the green line connecting the ports in the diagram above. The Green LED Sync indicator on each of the 865XW PRO units will blink as they see each other and then go solid once they are synched together.

Left side LEDs

- Mode** – Yellow Solid LED (LED Off = CO unit, LED On = CPE unit)
- Sync** – Green slow to fast flicker LED on power up – indicates negotiation of a link
– Green solid LED indicates link established and rapid pulse is traffic.
- Power** – Green Solid LED indicates the unit is receiving 12V power.

Right side LEDs

- Act** – Yellow LED
 - Off = No device attached or detected.
 - On = Solid, indicates the presence of local LAN.
 - Blinking = Indicates the presence of local LAN traffic.

The Green Sync LEDs will start flickering slowly and then fast as the units talk to each other. After a few seconds you should see a solid Green Interlink Sync LED on each unit to confirm a link is established. This confirms basic proper operation of the units.

Step 3 - Next for a more detailed test and to confirm your PoE Equipment works with the 865XW PRO, connect your Ethernet LAN to the 360 PoE Injector and the remote PoE device/s to the remote 865XW PRO LAN port and test connectivity. The Green Interlink Sync LED will pulse rapidly as it detects traffic.


Performing the On-Site Installation

After removing the Enable-IT 865XW PRO Outdoor Gigabit PoE Extender Kit from the box, and performing the Out Of The Box Testing (OOTBT), all that remains to install the unit on-site is to mount the unit, build the interconnect wiring, add voice lines if needed, and attach the LAN device cabling with the provided Ethernet Patch cords.

Building the 865XW PRO Interlink Wiring

The most important aspect of the installation is the correct wiring of the Interlink cabling.

For all wiring you will need to crimp a (LAN Standard) RJ-45 Male head to each end of the contiguous wire run and using the following TIA 568B straight through standard. We recommend using a category rated 100MHz or better twisted pair cable as it is optimized for high throughput frequencies isolated from cross-talk noise. Insert the completed RJ-45 ends into the 865XW PRO Interlink port on each 865XW PRO unit.

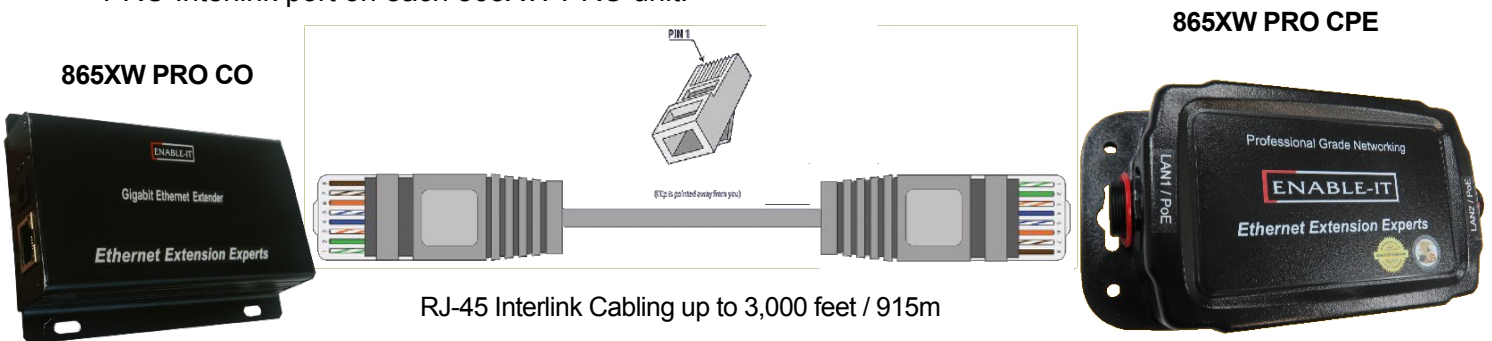

Cabling Devices to The Enable-IT 865XW PRO Extended Ethernet Kit

Attach your remote PoE device to the 865XW PRO CPE unit LAN ports with Ethernet patch cord provided. Attach your local LAN to the 395 PoE Injector with Ethernet patch cord provided. Attach the power adapters to both 865XW PRO units.

Attach your local Interlink cabling end to the 865XW PRO CO unit Interlink port – Then do the same for the remote end and plug into the 865XW PRO CPE unit Interlink port. The Sync LED's will flicker in a sequence talking to each other until they go solid. Your equipment should now be powered up and functioning. LED indicators will provide visual operational status of the 865XW PRO units.

Troubleshooting

First examine the backbone wiring pair and make sure you have solid connections. The Interlink Sync LED will be lit solid Green with rapid pulsing on each 865XW PRO unit to show proper connection and pairing. If the Interlink Sync LED Link is flashing slow to fast and never goes solid....

Then follow the steps below:

- 1) Make sure your wiring is straight through and not connected to any Telco punch down blocks; If so remove from the block and use Telco butt clips to bridge wire.
- 2) Check for a firm connection of the RJ-45 connections in each 865XW PRO unit, and power is applied to the 865XW PRO CO & CPE units.

- 3) You can easily isolate any issue by performing an Out Of The Box Test (OOTBT). This test will confirm the correct working order of your Enable-IT 865XW PRO Outdoor Gigabit PoE Extender Kit. This will point to a possible issue with your long distance Interlink wiring being affected by possible outside interference.

DIP Switch Settings. - Not Applicable for 865XW PRO

TECHNICAL SUPPORT

Online Technical Services

The Enable-IT Support [Portal](#) is available 24/7 to open a ticket or check the status of one. Please use this support website as your first source for help as it contains an on-line knowledge base of articles, documentation, FAQ's and other problem-solving resources. This web-based support resource provides the quickest solution to the most common technical support issues.

Returning Products for Warranty Repair

Enable-IT warrants to the original purchaser of this described Product ("you" or the "End User") that, for the limited lifetime period commencing on the date the Product was purchased (the "Warranty Period"), the Product will be substantially free from defects in materials and workmanship under normal use and conditions. Lifetime Warranty details here: <https://warranty.enableit.com>

This warranty does not apply to Products, which are resold as used, repaired or reconditioned. **Electrical or water damage is not covered under this warranty, extended warranties or Advanced Replacement Program (AREP).**

In order to obtain an authorized RMA approval, the End User must complete the required information online located at <https://support.enableit.com>. If you have questions or difficulty completing this information you may contact the Customer Care Team at 888-309-0910 between the hours of 7:00 a.m. and 4:00 p.m. Pacific Time(PST).

Returning Products for Refund

Enable-IT, Inc. offers a generous 45-Day refund on a single Ethernet Extender Kit only, and is subject to a 20% Restocking Fee. Shipments without a valid or authorized RMA number, or sent to our corporate Las Vegas address, can be refused and / or billed for additional shipping.

CONTACT US

Sales and Customer Care:

Toll Free US and Canada

888 309-0910

Other International

+1 702 924-0402

E Mail

sales@enableit.com
support@enableit.com

RMA Support:

<https://support.enableit.com>